

Features

- Plug and play feature for it is easy to use.
- 100% Game compatibility.
- Automatically detect and generate game save file.
- Built in cheat engine.
- Fully customizable skin interface.
- Supports both the Micro SDHC and MicroSD. (Capacity over 4GB)
- Supports homebrew applications.
- Supports software reset function.
- Supports Multi-Language.
- Supports Download Play.

• Single-chip solution, highest level of stability & lowest power consumption.

• Support Multi-Language: English, French, Dutch, German, Italian, Spanish, Portuguese, Korean and Thai Language.

Installation

To begin using the iTouchDS please visit <u>http://www.itouchds.com</u> to download the latest firmware. Once you have obtained the latest firmware simply unzip or unrar the file then drag and drop all the files onto the root of your MicroSD.

When all necessary files are transferred, insert the MicroSD into the back of the iTouchDS. Boot up the console the iTouchDS should be now up and running.

Main Menu

On the main menu you will see three different icons:



iCard • Browse through files on the MicroSD

	Create homebrew and game shortcuts for iFav
iFav	 Navigate and run Homebrew or Games shortcuts
	Manage shortcuts
iGame	Run games
	 Adjust games setting

<u>iCard</u>

In this menu you will be able to create a shortcut for your favorite game or homebrew.

Create Shortcuts	 Highlight the Homebrew or Game icon you would like to create shortcut for. Press "X" On the top screen it will prompt: <i>Create "icon" for iFav? A-Confirm B-Cancel</i>

Once you have created your shortcuts press "B" to go back to the Main Menu.

<u>iFav</u>

In iFav you may browse through quickly for all your favorite shortcuts that you have created from iCard. Also you will be able to delete shortcuts from the iFav menu as well.

Run Shortcuts	 Navigate to the shortcut icon Press "A" If you selected a game, on the top screen it will prompt: <i>Run game? A-Confirm B-Cancel</i> Homebrew shortcuts will run without prompt.
Delete Shortcuts	 Highlight the shortcut icon that you wish to delete Press "X" On the top screen it will prompt: Delete? A-Confirm B-Cancel

Press "B" to get back to the Main Menu.

In iFav you will also see a preset icon which is a shortcut for the language selector (iT_Language.nds). You may launch it by hitting "A"



After selecting which language you which to use, you will be asked to reboot the system.



After rebooting the system should load the language you have selected.

<u>iGame</u>

When you enter this menu navigate to the directory or folder where you have stored your games. You will then see the game list. On the right hand side you will see a Setting Icon for each game. Slide the cross arrow to the Setting Icon and Press "A" to enter the game setting menu.



Once you entered the Game Setting Menu you will see a list of options:



		 Press "A" to enter that directory Highlight the cheat file you wish to load Press "A" twice On the top screen it will prompt: Would you like to replace the "GMC" file? A-
		Confirm B-Cancel
	Activate Cheats	 Press "A" to view the list of options On the option list you will see: OFF SWITCH ON ALWAYS ON
		If you select <i>SWITCH ON</i> you will see the list of function on the top screen: [SELECT + LEFT => Enable] [SELECT + RIGHT => Disable]
		If you select ALWAYS ON then the cheat codes you have selected will activate automatically and it cannot be disable during game play. 3. Press "A" to confirm your option
Ð	Slow Motion	 Press "A" to view the list of options On the option list you will see: OFF L+SL R+SL Select which combination of buttons you wish
		 4. Press "A" to confirm your option
FB	Backup Save File	 Press "A" to view the list of options On the option list you will see: .Sav->.Sav1 .Sav->.Sav2 .Sav1->.Sav .Sav2->.Sav EMPTY SAVE
		.Sav->.Sav1 – Make a backup of the main .Sav file on the first backup save file (.Sav1) .Sav->.Sav2 – Make a backup of the .Sav file on the second backup save file (.Sav2) .Sav1->.Sav – Replace the main .Sav file with the

	first backup save file (.Sav1) .Sav2->.Sav – Replace the main .Sav file with the second backup save file (.Sav2) EMPTY SAVE – Delete and erase all the save files
Game Play Feature	 Press "A" to view the list of options On the option list you will see: Normal Download Play If your game support Download Play and you wish to use that function you will need to activate that feature through this menu. Select which game play you wish to activate and press "A" to proceed
Select Cheat Codes	 Press "A" to view the list of cheat codes Select and highlight which cheat code you wish to activate Press "A" to select the cheat code Once you finish selecting all the cheat codes press "B" to go back to the setting menu *Note remember to activate the cheat function in order for the cheats to work see Activate Cheats for details.
Softreset	 Press "A" to view the list of options On the option list you will see: OFF L+R+B+A+X L+R+B+A+Y Select which combination of buttons you wish to use to activate the softreset feature Press "A" to confirm your option
Slow Motion Level	5. Press "A" to view the list of options 6. On the option list you will see: LEVEL 1 LEVEL 2 LEVEL 3

		LEVEL 4 LEVEL 5
		*Note remember to activate the slow motion function in order for the slow motion levels to work see Slow Motion for details.
\checkmark	Confirm	Once you have all the setting adjusted press this button to confirm your setting for the game.
×	Cancel	If you want to cancel your settings adjustment press this button. On the top screen it will prompt: <i>Cancel Setting? A- Confirm B- Cancel</i>

When all the settings for the game are set, highlight the game icon and press "A" to run the game. On the top screen it will prompt: Run Game? A- Confirm B- Cancel

Useful Informations

For FAQ, latest firmware, product information and contact information please visit <u>http://www.itouchds.com</u>

Features and appearance of the interface may vary depending on the version of firmware.